
Rain / Soil Moisture Sensor Wiring: Steps 1-2

Connect Normally Closed (NC) wires to right side Server terminals

Turns the system off when sensor is activated

1. Add jumper wire: connect the "24 VAC Common" (top) terminal to the bottom 24 VAC terminal

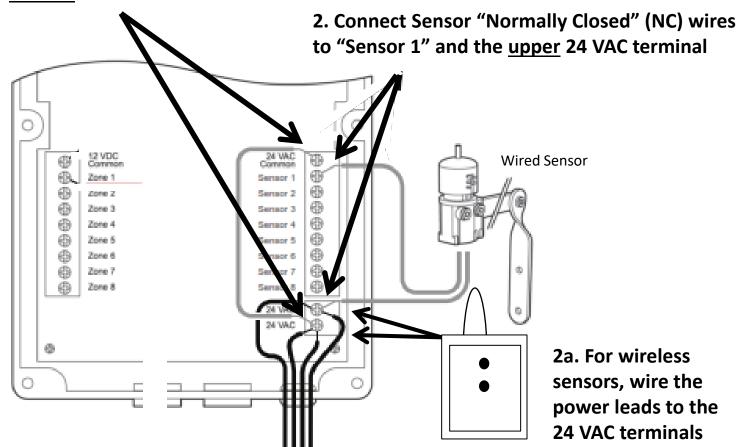

Note:

For multiple server systems, wire sensors in parallel

Wireless Sensor